


# High precision fluxgate AC/DC current transducer for galvanically isolated measurement up to 150 A

#### **Features**

- · 100 A rms nominal current
- 1000 primary/secondary current ratio
- · Current output
- Ø20.7 mm aperture
- 51 ppm total accuracy
- 1 ppm linearity
- 50 ppm offset
- 2 MHz bandwidth
- · Status signal and LED

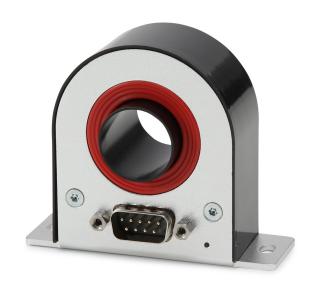



## **Description**

High precision DC current transducer (DCCT) measuring up to 150 A currents and continuously measuring 100 A currents with a linearity error less than 1 ppm. With a compact size and lightweight design, the DT100ID allows precision current sensing in tight spaces.

Based on the ultra stable Danisense closed loop flux gate technology, the DT100ID has very low offset and ultra low drift. The 2 MHz bandwidth allows high frequency and high precision measurements combined in a convenient package.

It provides high resolution for precise monitoring, reliable and consistent performance, and a compact and rugged design for easy installation and durability.

# **Applications**

- · Space constrained applications
- Power measurement and power analysis
- · Particles accelerators
- · MRI devices and medical scanners
- · Batteriy testing and evaluation systems
- Current calibration purposes
- · Precision current sensing



# Electrical specifications at 23 °C, $V_{\rm S}=\pm$ 15 V supply voltage

Parameter		Symbol	Unit	Min	Тур.	Max	Comment
Nominal primary AC current		I <sub>PN AC</sub>	Arms			100	Refer to Fig. 3 for derating
Nominal primary DC current		I <sub>PN DC</sub>	Α	-100		100	Refer to Fig. 3 for derating
Measuring range		I <sub>PM</sub>	А	-150		150	Refer to Fig. 3 for derating
Overload capacity		I <sub>OL</sub>	А	-500		500	Non-measured 100ms
Nominal secondary current		I <sub>SN</sub>	mA	-100		100	At nominal primary DC current
Primary / secondary ratio		k	A/A	1000		1000	I <sub>primary</sub> /I <sub>secondary</sub>
Measuring resistance		R <sub>M</sub>	Ω	0	50		Refer to Fig. 2 for details
Linearity error		$\epsilon_{L}$	ppm	-1	0.4	1	ppm refers to nominal current
Offset current (including earth	n field)		ppm	-50		50	ppm refers to nominal current
Offset temperature coefficien			ppm/K	-0.3	0.15	0.3	ppm refers to nominal current
Offset stability over time			ppm/month	-0.1	0.10	0.1	ppm refers to nominal current
Bandwidth		f(±3dB)	MHz	0.1	2	0.1	Small signal. See Fig. 4
Response time to a step curre	ont law	t <sub>r</sub>			1		To 90% of step current
<u> </u>	ELLY IBM	+	μs	0/		f full scale	,
Total accuracy	10.11-	$\epsilon_{tot}$			-		Without offset.
	<10 Hz				0.00 + 0.00		Full scale refers to I <sub>PN DC</sub> .
	<100 Hz				002 + 0.0		For details, see Reading and full
	<1 kHz				01 + 0.00		scale.
	<10 kHz				015 + 0.00		See Fig. 4 for more.
	<100 kHz				3 + 0.002		
	<1MHz				15 + 0.01		
	<2MHz			30 + 0.01			
Phase shift	<10 Hz				0.01°		
	<100 Hz				0.01°		
	<1 kHz				0.03°		
	<10 kHz				0.2°		
	<100 kHz				3°		
	<1MHz				20°		
	<2MHz				30°		
RMS noise	<10 Hz		ppm rms		0.03	0.07	ppm refers to nominal current
	<100 Hz				0.5	1.1	
	<1 kHz				0.6	1.5	
	<10 kHz				0.9	2	
	<100 kHz				6.5	12	
Peak-to-peak noise	<10 Hz		ppm p-p		0.4	0.5	ppm refers to nominal current
•	<100 Hz				1.6	2	
	<1 kHz				3.2	4	
	<10 kHz				5.1	8	
	<100 kHz				50	80	
Fluxgate excitation frequency		f <sub>exc</sub>	kHz		15.6		
Power supply voltages			V <sub>dc</sub>	±14.25		±15.75	
Idle current consumption			mA		±40		Primary current = 0 A
Current consumption at max	current		mA	-190	<u> </u>	190	At I <sub>PM</sub>
Power consumption			W			3.7	At I <sub>PM</sub>
Operating temperature range		Ta	°C	-40		85	, ILIVI
operating temperature range		ı a		1 -10			
Offset change with external m	nagnetic field		ppm/mT	-8	2	8	ppm refers to nominal current

<sup>1</sup> ppm nominal = 0.1  $\mu$ A secondary current.

(2)

(3)

(5)

(6)

(7)

(8)



#### **Linearity error**

Linearity error is defined as the deviation from a straight line. The straight line is a linear regression trend line based on the least squares method of the measurement points from 0 to positive max current and another trendline is calculated from 0 to negative max current. The difference between each measured point and the linear trend line is the linearity error. The linearity error  $\epsilon_{\rm l}$  can be expressed as (1), where I<sub>reading</sub> is the measurement result and I<sub>fitted</sub> is the regression value.

$$\epsilon_{L} = I_{\text{reading}} - I_{\text{fitted}}$$
 (1)

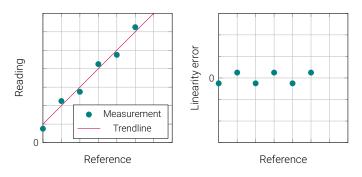


Figure 1: Linearity error definition

 $\epsilon_{\mathrm{tot}} = \epsilon_{\mathrm{reading}} \cdot I_{\mathrm{reading}} + \epsilon_{\mathrm{fullscale}} \cdot I_{\mathrm{PNDC}}$ 

 $\epsilon_{\mathrm{tot}} = 0.005\% \cdot 10 \mathrm{A} + 0.0015\% \cdot 500 \mathrm{A} = 8 \mathrm{mA}$ 

 $\epsilon_{\mathsf{P}_{\mathsf{ampere}}} = \epsilon_{\mathsf{ppm}} \cdot \mathsf{I}_{\mathsf{PNDC}} \cdot 1 \times 10^{-6}$ 

 $\epsilon_{\text{S}_{\text{ampere}}} = \epsilon_{\text{ppm}} \cdot \frac{I_{\text{PNDC}}}{k} \cdot 1 \times 10^{-6}$ 

 $\epsilon_{\rm S_{\rm volt}} = \epsilon_{\rm ppm} \cdot \frac{\rm I_{\rm PNDC}}{\rm _k} \cdot 1 \times 10^{-6}$ 

#### Reading and full scale

Reading is the actual value measured at a given time. Full scale is the rated nominal value of the device. If a given current I<sub>reading</sub> is measured, the total accuracy is calculated as (2). Example: A 500 A rated device has a specification of 0.005% + 0.0015% (reading + full scale) at < 10 Hz. The device is measuring (reading) 10 A dc, and the accuracy is calculated as (3).

#### Primary and secondary current/voltage

The secondary current I<sub>S</sub> or voltage V<sub>S</sub> is calculated by using the transfer ratio k, as in (4).

$$I_{S} = \frac{I_{P}}{k}, \qquad V_{S} = \frac{I_{P}}{k} \tag{4}$$

#### Converting from ppm of nominal to secondary current/voltage

The nominal primary current is the rated current for the device. If  $\epsilon_{\text{ppm}}$  is the error in ppm referred to nominal, use (5) to convert to ampere primary current. If the primary/secondary transfer ratio is k, use (6) to convert to ampere secondary current. If the device has voltage output, use (7)

#### **Linear interpolation of accuracy specification**

If the accuracy at a specific frequency is required, it is possible to use linear interpolation between known points. If the frequency f is  $f_1 < f < f_2$  and the accuracy at the frequency  $\epsilon(f)$  is  $\epsilon(f_1) < \epsilon(f) < f_2$  $\epsilon(f_2)$ , then the accuracy at f is found as (8).

$$\epsilon(\mathbf{f}) = \frac{\mathbf{f}_2 - \mathbf{f}_1}{\epsilon(\mathbf{f}_2) - \epsilon(\mathbf{f}_1)} (\mathbf{f} - \mathbf{f}_1) + \epsilon(\mathbf{f}_1) \tag{8}$$

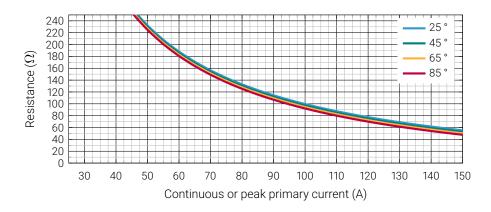


Figure 2: Maximum measurement resistor R<sub>M</sub> vs. current and ambient temperature

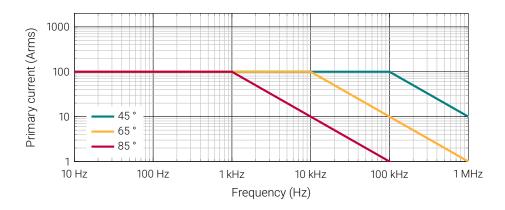


Figure 3: Maximum continuous primary current vs. frequency

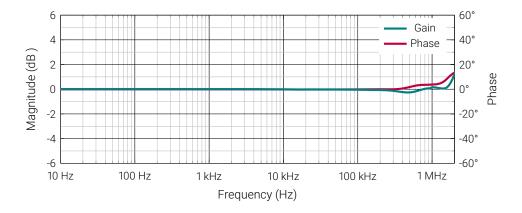


Figure 4: Frequency characteristics. For high frequency measurement, see https://danisense.com/wp-content/uploads/Current-Measurements-at-High-Frequencies.pdf



#### Isolation specifications according to IEC 61010-1



When using *REINFORCED insulated* wire, all wiring must be insulated for the highest voltage used. When using *BASIC insulated* or *uninsulated* wire, follow the specified voltages in the table below:

Parameter	Unit	Value	
Clearance			8.5
Creepage distance			11.5
Comparative tracking index (CTI)			> 600
Continuous working voltage according to IEC 61010-1	with:		
Uninsulated wire:	Non mains		1000
	CAT II (dc and rms)		600
	CAT III (dc and rms	\ \ \	300
BASIC insulated wire:	Non mains		2000
	CAT II (dc and rms)		1000
	CAT III (dc and rms		1000
Transient voltage according to IEC 61010-1 with:			
Uninsulated wire:	Non mains		4000
	CAT II		6000
	CAT III	V	6000
BASIC insulated wire:	Non mains		3500
	CAT II		6000
	CAT III		8000



Do not connect the transducer to signals or use for measurements within Measurement Category IV, or for measurements on MAINs circuits or on circuits derived from Overvoltage Category IV which may have transient overvoltages above what the product can withstand. The product must not be connected to circuits that have a maximum voltage above the continuous working voltage, relative to earth or to other channels, or this could damage and defeat the insulation.

#### **Environmental and mechanical characteristics**

Parameter	Unit	Min	Тур	Max	Comment
Altitude	m			2000	
Usage					Designed for indoor use
Pollution degree				2	
Operating temperature range	°C	-40		85	
Storage temperature range	°C	-40		85	
Relative humidity	%	20		80	Non-condensing
Ingress protection rating				IP20	
Mass	kg		0.15		

Connections: DSUB-9

EMC: EN 61326-1:2013-2021

Safety: IEC 61010-2-030:2021/A11:2021 and IEC 61010-1:2010/A1:2019

Random vibration test: IEC 60068-2-64:2008



Shock test: IEC 60068-2-27:2009

External devices: External devices connected to current transducers must comply with the standards

IEC61010-1 and IEC62368-1 and be energy-limited circuitry

Cleaning: The transducer should only be cleaned with a damp cloth. No detergent or

chemicals should be used.

Temperature: When multiple primary turns are used or high primary currents are applied the

temperature around the transducer will increase, please monitor to ensure that the maximum ratings are not exceeded. It is recommended to have minimum 1

 $\,\mathrm{mm}^2$  per ampere in the primary bus bar.

#### Intended use

The DT100ID is designed to measure current up to 150 A, and be powered by a DSSIU-4-1U or DSSIU-6-1U or similar power supplies. Please see the product manual: https://danisense.com/user-manual.

#### Instruction for use



Make sure to follow the polarity of the voltage supply to avoid damaging the device. See Fig. 6.

- 1. Do not power up the device before all cables are connected.
- 2. Place the primary conductor through the aperture of the transducer.
- 3. Connect a DSUB cable between DSSIU-4/6-1U and each sensor.
- 4. Connect a low impedance amperemeter, measuring resistor or power analyzer on the secondary output (4mm red and black connectors on the DSSIU-4/6-1U).
- 5. When all connection are secured connect mains power.
- 6. Apply primary current.




There is a risk of electrical shock if an uninsulated busbar with high voltages is touching the metal en- closure of the transducer. Please ensure, before powering up the system, that no uninsulated wire can touch the metal enclosure.



Do not disassemble the unit. If the green status LED is not operating with all cables connected and the system powered up, disconnect power and contact Danisense for further instruction. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

2x M4 - slotted hole

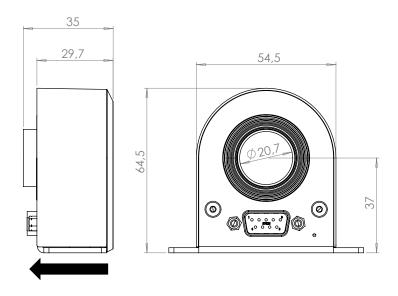

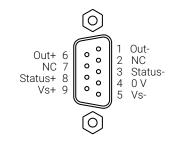


Figure 6: DSUB-9 connection pinout

 


Figure 7: Status signal optocoupler



Figure 5: Dimensions of transducer. 0.3 mm Tolerance

65 76

Figure 8: External measurement resistor connection, see Fig. 2

#### **Mounting**

Base plate mounting: 2 slotted holes Ø6 mm
Back plate mounting: 4 slotted holes Ø6 mm
Fastening torque: 5.5 Nm

### **Pin out description**

1	Out-	Measurement output negative terminal
2	NC	No connection
3	Status-	Status signal negative terminal
4	0 V	0 V connection for supply voltage
5	V <sub>S</sub> -	Negative supply voltage
6	Out+	Measurement output positive terminal
7	NC	No connection
8	Status+	Status signal positive terminal
9	$V_S+$	Positive supply voltage

#### **Positive current direction**

Is identified by an arrow on the label.

#### Status signal and LED

When the sensor is operating in normal condition the status pins (Status+ and Status-) are shorted by an optocoupler and the green status LED is ON, see Fig. 7. When a fault is detected, or the power is off, the status pins are opened and the green status LED is OFF. Status signal optocoupler ratings found below:

Status+ to Status- (Pin 8 to pin 3)
10 mA
60 V
5 V



# **Declaration of Conformity**

Danisense A/S Malervej 10 DK-2630 Taastrup Denmark

Declares that under our sole responsibility that this product is in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:

Directive 2014/30/EU
Directive 2014/35/EU

And that the following harmonized standards have been applied

EN 61010-1 (Third Edition):2010, EN 61010-1:2010/A1:2019

EN 61010-2-030:2021/A11:2021

EN 61326-1:2013

All DANISENSE products are manufactured in accordance with RoHS directive 2011/65/EU. Annex II of the RoHS directive was amended by directive 2015/863 in force since 2015, expanding the list of 6 restricted substances (Lead, Hexavalent Chromium, PBB, PBDE and Cadmium)

Danisense follows the provision in EN 63000:2018

Place

Taastrup, Denmark

Date

Henrik Elbæk

Hourl Effe

2022-03-15